

H302 Harmful if swallowed.  
H314 Causes severe skin burns and eye damage.

P261 Avoid breathing dust/fume/gas/mist/vapours/spray.  
P280 Wear protective gloves/protective clothing/eye protection/face protection.  
P301 + P330 + P331 IF SWALLOWED: rinse mouth. Do NOT induce vomiting.  
P303 + P361 + P353 IF ON SKIN (or hair): Remove/take off immediately all contaminated clothing. Rinse skin with water/shower.  
P310 Immediately call a POISON CENTER or doctor/physician.

**DANGER**



Water-i.d./Pool-i.d. GmbH  
Daimlerstr. 20  
D-76344 Eggenstein  
Tel. +49 (0) 721 - 782029-0  
Fax +49 (0) 721 - 782029-11  
[www.water-id.com](http://www.water-id.com)  
[info@water-id.com](mailto:info@water-id.com)

**NOTRUF/EMERGENCY: +49 (0)89-19240 (24h)**



## Calcium Hardness

 **Calcium Hardness**

Tablet-count method

 **Calciumhärte**

Tabletten-Zählverfahren

 **Dureté calcique**

Méthode de comptage à pilule

 **Durezza del calcio**

Metodo di conteggio de pastiglie

 **Dureza cálcica**

Método Contador de tabletas

 **Dureza de cálcio**


Método de contagem de comprimidos

 **Calciumhårdhed**

Tablettællings-metoden

 **Calcium hardheid**

Tablet-telmethode




100 ml: 10 - 250 mg/l CaCO<sub>3</sub>


50 ml: 20 - 500 mg/l CaCO<sub>3</sub>

①


Calcium Hardness



②

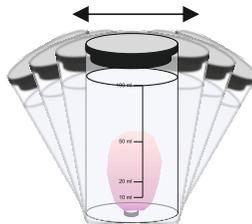


③

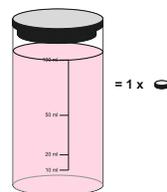


④



Calcium Hardness




⑤

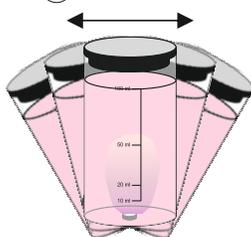

4.5  
4.5  
4.5  
4.5

Repeat until



50 ml: ( x 40 ) - 20 = mg/l CaCO<sub>3</sub>

100 ml: ( x 20 ) - 10 = mg/l CaCO<sub>3</sub>



	mmol/l	mval/l	°dH	°e	°f
1 mg/l CaCO <sub>3</sub>	0.01	0.02	0.056	0.07	0.1

Alkaline Earth Ions  
Erdalkali-Ionen  
Ions alcalino-terreux  
Ioni alcalino terrosi  
Iones alcalina terrosos  
Lões alcalino-terrosos  
Ioner fra alkalisk jord  
aardalkali-ionen



QUALITY REAGENTS  
MADE IN GERMANY