



Instructions  
Gebrauchsanleitung  
Instrucciones  
Istruizione

**FLEXI** **TESTER**  
FTS2900

**Manganese**  
(0.0 - 5.0 mg/l)




**WATER TESTING**  
**MADE IN GERMANY**

Reagents  
Reagenzien  
Réactifs  
Reactivos  
Reagenti



**FTS2900**

TbsHMGNSLR1  
Manganese LR N° 1 Photometer  
PPPMGNSLR2  
Manganese LR N° 2 Photometer

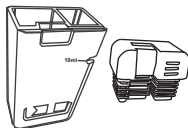

no detergent!



clean properly



**WATER TESTING**  
**MADE IN GERMANY**

**(GB)**

### CAUTION!

Reagents for water-analysis only!  
Do not eat! Keep away from children!  
Store cool and dry!  
Clean tester properly before testing!

**(F)**

### Attention!

Les pastilles sont exclusivement destinées aux analyses chimiques. NE PAS AVALER. Tenir hors de portée des enfants. Conserver dans un endroit frais et sec. Bien rincer le tester avant chaque utilisation!

**(E)**

### ¡Atención!

Pastillas para el análisis de aguas, solamente para análisis químicos!  
No para tomar!  
No debe llegar a las manos de niños!  
Consérvese en lugar fresco y seco!  
Limpiar el aparato antes de usar!

**(I)**

### Attenzione!

Reagenti unicamente per analisi acqua!  
Non ingerire!  
Tenere fuori dalla portata dei bambini!  
Mantenere in luogo asciutto e fresco  
Dopo l'utilizzo pulire ed asciugare accuratamente il tester.


**(DE)**

### Achtung!


Reagenzien nur für chemische Analysen!  
Nicht einnehmen! Darf nicht in die Hände von Kindern gelangen! Kühl und trocken lagern!




**1** Fill with 10ml of water to be tested

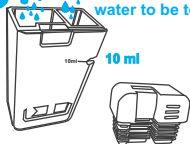


**2** 1 x Manganese LR N° 1 Powder Pillow

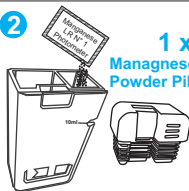


**3** Dissolve COMPLETELY!

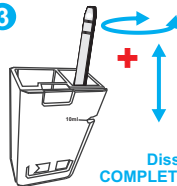

**4** 1 x Manganese LR N° 2 Powder Pillow

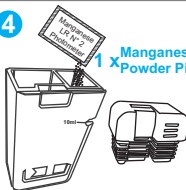

**5**

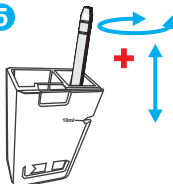

**5 min.**



**6** 6: Insert FTS2900 stick Manganese 0.0- 5.0 mg/l



no detergent!



clean properly

