

Total Hardness LR TC

UFI: 41M0-JV27-V022-S22Y



Warning

H312 - Harmful in contact with skin

H332 - Harmful if inhaled

P261 - Avoid breathing dust/fume/gas/mist/vapours/spray

P280 - Wear protective gloves and protective clothing

P302 + P352 - IF ON SKIN: Wash with plenty of water and soap

P312 - Call a POISON CENTER or doctor if you feel unwell

P501 - Dispose of contents/ container to an approved waste disposal plant

Test Kit

CaCO₃ (10 - 500 mg/l)



Total Hardness LR TC



Total Hardness

Tablet-count method



Gesamthärte

Tabletten-Zählverfahren



Dureté totale

Méthode de comptage à pilule



Durezza totale

Metodo di conteggio de pastiglie



Durezza total

Método Contador de tabletas



Total hårdhed

Tablettællings-metoden




Totale hardheid

Tablet-telmethode

NOTRUF/EMERGENCY: +49 (0)89-19240 (24h)


Water-i.d. GmbH
Daimlerstr. 20
D-76344 Eggenstein
Tel. +49 (0) 721 - 782029-0
Fax +49 (0) 721 - 782029-11
www.water-id.com
info@water-id.com

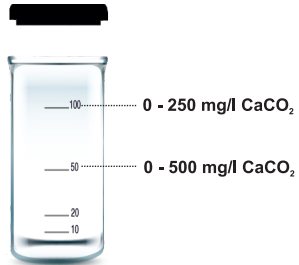


1



2

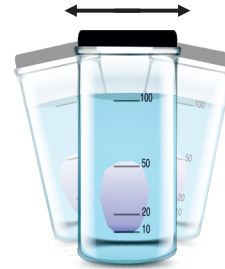

3

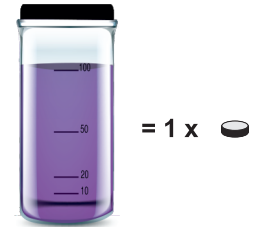


4



5



50 ml: ( x 40) - 20 = mg/l CaCO₃

100 ml: ( x 20) - 10 = mg/l CaCO₃

	mmol/l	mval/l	°dH	°e	°f
1 mg/l CaCO ₃	0.01	0.02	0.056	0.07	0.1

Alkaline Earth Ions
Erdalkali-Ionen
Ions alcalino-terreux
Ioni alcalino terrosi
Iones alcalina térreos
Lões alcalino-terrosos
Ioner fra alkalisk jord
aardalkali-ionen

