

Total Hardness TC

UFI: 89V6-E0F2-X22V-0AR8



Warning

H302 - Harmful if swallowed

H332 - Harmful if inhaled

P261 - Avoid breathing dust/fume/gas/mist/vapours/spray

P264 - Wash face, hands and any exposed skin thoroughly after handling

P270 - Do not eat, drink or smoke when using this product

P312 - Call a POISON CENTER or doctor if you feel unwell

P330 - Rinse mouth

P501 - Dispose of contents/ container to an approved waste disposal plant

Test Kit

CaCO₃ (10 - 500 mg/l)



Total Hardness TC



Total Hardness

Tablet-count method



Gesamthärte

Tabletten-Zählverfahren



Dureté totale

Méthode de comptage à pilule



Durezza totale

Metodo di conteggio de pastiglie



Durezza total

Método Contador de tabletas



Total hårdhed

Tablettællings-metoden





Totale hardheid

Tablet-telmethode

NOTRUF/EMERGENCY: +49 (0)89-19240 (24h)

Water-i.d. GmbH
Daimlerstr. 20
D-76344 Eggenstein
Tel. +49 (0) 721 - 782029-0
Fax +49 (0) 721 - 782029-11
www.water-id.com
info@water-id.com

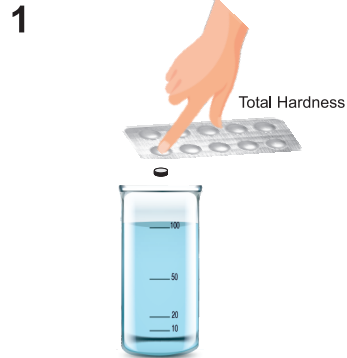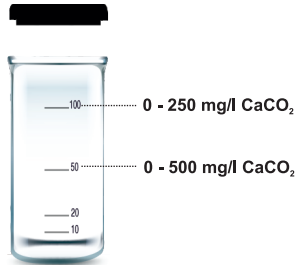

50 ml: (x 40) - 20 = mg/l CaCO₃

100 ml: (x 20) - 10 = mg/l CaCO₃

	mmol/l	mval/l	°dH	°e	°f
1 mg/l CaCO ₃	0.01	0.02	0.056	0.07	0.1

Alkaline Earth Ions
Erdalkali-Ionen
Ions alcalino-terreux
Ioni alcalino terrosi
Iões alcalina térreos
Lões alcalino-terrosos
Ioner fra alkalisk jord
aardalkali-ionen

