

## Hardness Yes/No

UFI: 5G2K-5Y3G-RE1N-NF89



### Warning

H302 - Harmful if swallowed

H332 - Harmful if inhaled

P261 - Avoid breathing dust/fume/gas/mist/vapours/spray

P264 - Wash face, hands and any exposed skin thoroughly after handling

P270 - Do not eat, drink or smoke when using this product

P312 - Call a POISON CENTER or doctor if you feel unwell

P330 - Rinse mouth

P501 - Dispose of contents/ container to an approved waste disposal plant

# Test Kit

CaCO<sub>3</sub> (4 / 8 / 20 mg/l)



Hardness **yes/no**

 **Total Hardness** YES/NO

 **Gesamthärte** JA/NEIN

 **Dureté totale** OUI/NON

 **Durezza totale** SI/NO

 **Durezza total** SI/NO

 **Total hårdhed** JA/NEJ

 **Totale hardheid** JA/NEE


**NOTRUF/EMERGENCY: +49 (0)89-19240 (24h)**

Water-i.d. GmbH  
Daimlerstr. 20  
D-76344 Eggenstein  
Tel. +49 (0) 721 - 782029-0  
Fax +49 (0) 721 - 782029-11  
[www.water-id.com](http://www.water-id.com)  
[info@water-id.com](mailto:info@water-id.com)



1


50 ml



Fill in sample water!


2a

1x  
Hardness yes/no




2b


2x  
Hardness yes/no



3a

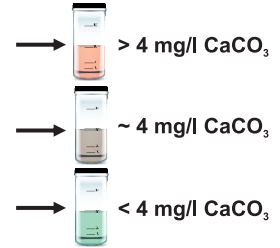


3b

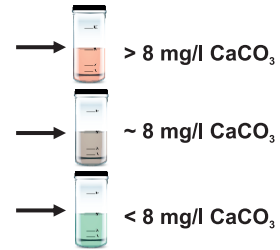

1

20 ml





Fill in sample water!

2

2x  
Hardness yes/no



3

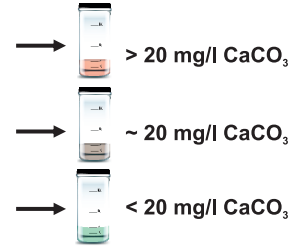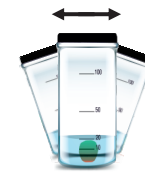

	mmol/l	mval/l	°dH	°e	°f
1 mg/l CaCO <sub>3</sub>	0.01	0.02	0.056	0.07	0.1

Alkaline Earth Ions, Erdalkali-Ionen, Ions alcalino-terreux, Ioni alcalino terrosi, Iones alcalina térreos, Löes alcalino-terrosos, Ioner fra alkalisk jord, aardalkali-ionen

